

STEP BY STEP GUIDE FOR TSRW'S MANUAL BLIND INSTALLATION



TSRW
TONY SANDELL
ROOF WINDOW

TSRW's manual blind kit:

- Receiver hooks (quantity dependent on window length)
- Panel pins (quantity dependent on window length)
- 220mm Spacer

Additional tools you will need:

- Hammer
- Screwdriver (with screw-head bit)

- 01.** Starting at the bottom of the window/skylight, push the receiver hook upwards towards the glass, ensuring it is positioned in the bottom corner of the frame.


Note: The receiver must face the bottom of the frame so that it can hook and support the bottom rail of the blind.

Hammer a panel pin into the provided hole to secure the receiver in place.



- 02.** Using the 220 mm spacer provided, position it above the installed receiver to determine the placement of the next receiver. Secure the next receiver in place using a panel pin.

Repeat this step on both sides of the frame, ensuring that the same number of receivers are installed on each side.

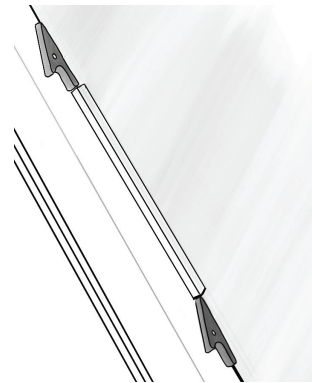


- 03.** Insert the screw-head bit into a magnetic holder or screwdriver and ensure it is ready for use.


- 04.** On the left-hand side of the blind roll, follow the rotation instructions indicated on the L-shaped bracket.

Complete 10 clockwise rotations in the direction shown on the spring roller. This action tensions the internal spring mechanism to ensure the blind opens and closes smoothly.

Take care to maintain a firm grip and do not allow the blind to unroll.

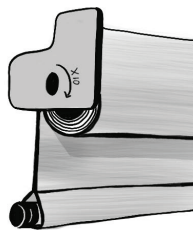

- 05.** Insert the pin (located on the right-hand side of the blind) into the pre-fitted grommet installed in all TSRW roof window/skylight frames.

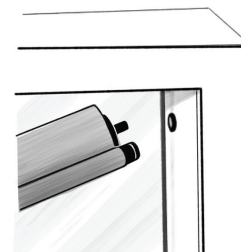

- 06.** Slide the rotation spring into the top left-hand corner of the frame, ensuring it sits flush with both the top of the frame and the window.

Secure it in place using a screw.

Note: The rolled blind must be positioned along the top of the frame, with the blind fabric feeding downwards along the glass when opened.

